



HH-746 HEADWORN MICROPHONE




Rugged but low in profile, the HH-746 boasts exceptional clarity. It has a noise-canceling polar response, which offers extremely good rejection of surrounding noise and very high signal to noise ratio when the microphone is used in close proximity to the mouth.

Microphone capsule is protected from moisture by plastic injection. Suitable for both hardwired and wireless operation.

Recommended for tough professional applications with moderate to high background noise.

Frequency response

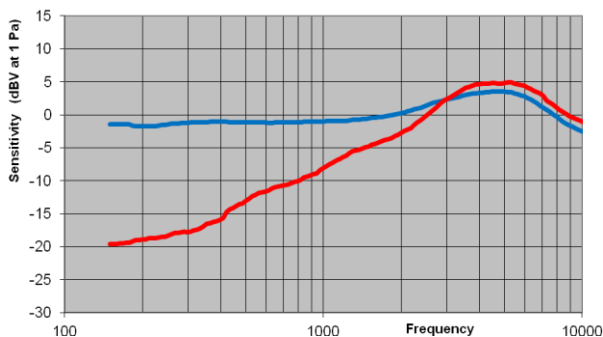

Features:

- Great Acoustic Performance
- Superb Ambient Noise Rejection
- Rugged Construction
- Flexible Boom Arm
- High-Quality Easy-Maintenance Headband

Specifications:

Microphone	Style MH-03
Generating Element:	Electret Condenser
Polar Pattern:	Noise Canceling
Frequency Response:	200 Hz to 10 kHz
Sensitivity (1 kHz @ ¼" distance)	
3-wire:	-42 dB re 1 V/Pa
Bias Voltage:	1.5 Vdc to 9 Vdc
Impedance:	3k ohm (typical)
General	
Weight:	62 g
Cable Length:	1.5 m
Cable Diameter:	2.5 mm
Color:	Black
Boom Diameter	4 mm
Wire Configuration:	B+ : Red Sig : White Gnd: Shield
Standard Accessories:	Windscreen, Cable clip